


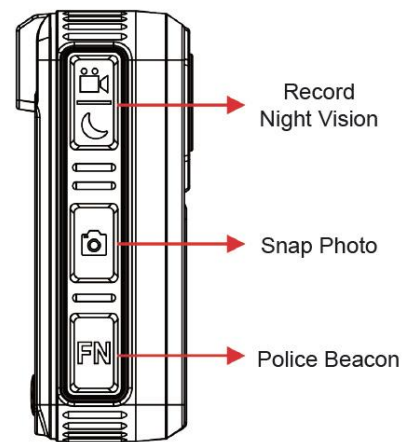


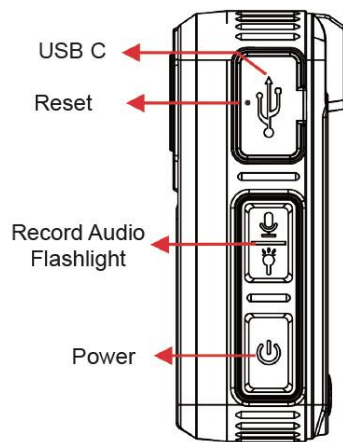

BLACK STEALTH

Law Enforcement Premium Body Camera
GEN 2

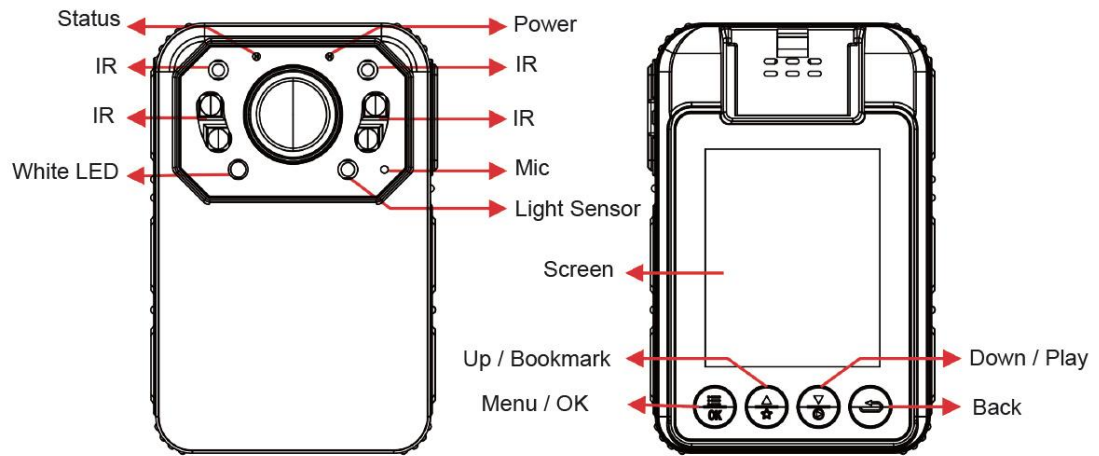

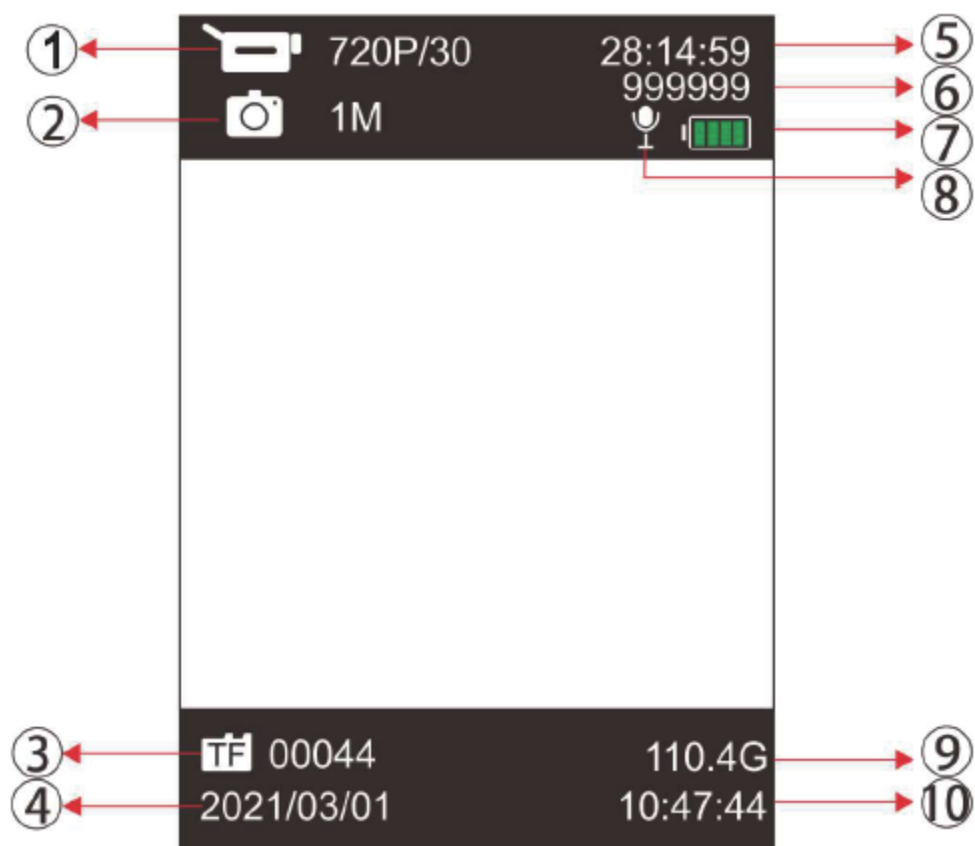

1. Video recording icon
2. Photo resolution
3. Number of files on the TF card
4. System date
5. Remaining recording time
6. Number of photos that can be taken
7. Battery icon
8. Audio recording icon
9. Remaining storage on the TF card
10. System time

Device Charging Instructions

Low Battery Warning: When the battery voltage is too low, the battery icon in the top-right corner of the display will turn red. The screen will intermittently show the message "Low battery, please charge in time" accompanied by a prompt sound. After 5 minutes, the device will automatically shut down. Please charge the device promptly when the low battery warning appears to avoid affecting your usage.

This product supports two charging methods:

1. Charging through a power adapter.
2. Charging through a computer.

As shown in the diagram, connect the device to the computer using a Type-C data cable to charge. While charging, the status indicator will turn green, and the power indicator will turn blue. When charging is complete, the indicator will turn off.

Note: Different models may have slightly different configurations.

Power On:

In the powered-off state, press the [Power] button briefly to turn on the device. After powering on, it will enter the preview screen, and the work status indicator will turn green. If no operation is performed, it will automatically enter screen saver mode after 30 seconds. If recording starts, it will also enter screen saver mode after 30 seconds by default.

Power Off:

In the powered-on state, press and hold the [Power] button to turn off the device. All indicator lights will turn off. Press the [Power] button briefly to enter screen saver mode.

Standby:

In the powered-on state, if no operation is performed, the device will automatically enter screen saver mode after 30 seconds, and the screen will turn off. The work status indicator will turn green. Press any button to wake up the screen.

Menu Settings:

In standby mode, press the [Menu] button briefly to enter the settings interface. After entering the menu, press the [Up] or [Down] button to select the setting options you need. Press the [OK] button to confirm your selection. Use the [Up] or [Down] button to continue selecting. After setting, press the [OK] button again to confirm. The device will automatically save your settings without the need to confirm again. The system settings menu is as shown below:

Video Resolution:

Press the [OK] button to enter modification mode. Use the [Up] or [Down] button to select the resolution options, which include 4K, 1440P, 1296P (depending on configuration, refer to the actual product for details), 1080P, 720P, 480P. After selecting the required resolution, press [OK] to confirm.

Photo Resolution:

Press the [OK] button to enter modification mode. Use the [Up] or [Down] button to select the resolution options: 1M, 2M, 4M, 26M, 34M, 48M, 58M. The default is 1M. After selecting the desired resolution, press [OK] to confirm.

Burst Photo Mode:

Press the [OK] button to enter modification mode. Use the [Up] or [Down] button to select options: Off, 3 shots, 5 shots, 10 shots. The default is Off. After selecting, press [OK] to confirm.

Delayed Recording:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select the options: Off, 5 seconds, 30 seconds, 1 minute, 5 minutes. The default is Off. After selecting, press [OK] to confirm.

Compressed Storage:

After enabling, it reduces the image quality to save storage space and increase storage capacity. Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select the options: Off, On. The default is Off. After selecting, press [OK] to confirm.

Loop Recording:

When enabled, once the storage is full, the recorded files will be overwritten automatically. Press the [OK] button to enter modification mode. Select On or Off, the default is Off. After selecting, press [OK] to confirm.

Segmented Recording:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to set the segment recording time. Options include 5, 10, 15, 20, 30 minutes, with the default being 5 minutes. After selecting, press [OK] to confirm.

Motion Detection:

When enabled, in standby mode, if there is any object movement in front of the lens, it will automatically start recording for 10 seconds. If there is no object movement within 10 seconds, the recording will stop. If there is movement, recording will continue for another 10 seconds until there is no movement. Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options. The default is Off. After selecting, press [OK] to confirm.

Screen Off:

When enabled, the screen will turn off after a set time, and pressing any button will turn it back on. Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options: Off, 30 seconds, 1 minute, 2 minutes. The default is 30 seconds. After selecting, press [OK] to confirm.

Auto Power Off:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options: Off, 3 minutes, 5 minutes, 10 minutes, and so on. The default is 3 minutes. After selecting, press [OK] to confirm.

Beep Sound Indicator:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options: Off, On. The default is On. After selecting, press [OK] to confirm.

Exposure Compensation:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select the options: +3, +2, +1, 0, -1, -2, -3. The default is 0. After selecting, press [OK] to confirm.

Video Recording Indicator:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options: Off, On. The default is On. After selecting, press [OK] to confirm.

Volume Settings:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options: Low, Medium, High. The default is High. After selecting, press [OK] to confirm.

Car Mode:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options: Off, On. The default is Off. After selecting, press [OK] to confirm.

Virus Protection:

When enabled, if the device is connected to a computer as a disk drive, it will not be infected by a virus. Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options: Off, On. The default is Off. After selecting, press [OK] to confirm.

Password Protection:

Press the [OK] button to enter password input mode. The default password is 6 digits. You can change the password after entering it. Press the [Up] or [Down] button to adjust specific settings. The options are On or Off, with Off as the default. After selecting, press [OK] to confirm.

Change Password:

Press the [OK] button to enter password input mode. The default password is 6 digits. You can set a new password after entering the current password. Press the [Up] or [Down] button to adjust specific content. After completion, press [OK] to confirm.

Stealth Recording Mode:

When enabled, recording will start silently, with no indicators or status lights. Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options: On or Off, with Off as the default. After selecting, press [OK] to confirm.

Infrared Control:

Set to switch between automatic and manual night or day recording modes. In night mode, the image will be in black and white, and the infrared light will turn on. Press the [OK] button to enter dual-mode modification, then press the [Up] or [Down] button to select the options: Manual or Auto, with Manual as the default. After selecting, press [OK] to confirm.

Device ID:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to change the specific content. After completion, press [OK] to confirm.

Police ID Number:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to change the specific content. After completion, press [OK] to confirm.

Language Settings:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select the options: Simplified Chinese, Traditional Chinese, or English. The default is Simplified Chinese. After completion, press [OK] to confirm.

Voice Announcement:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to change the specific content. After completion, press [OK] to confirm.

Date/Time:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to change the specific content. After completion, press [OK] to confirm.

Formatting:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select whether to cancel or confirm. After completing the selection, press [OK] to confirm.

Factory Reset:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select whether to reset or not. After completing the selection, press [OK] to confirm.

Date Stamp:

Press the [OK] button to enter modification mode. Press the [Up] or [Down] button to select options: On or Off, with On as the default. After selecting, press [OK] to confirm.

Version Number:

Press the [OK] button to check the device's version number.

8. Recording

8.1 Video Recording:

In standby or preview mode, press and hold the [Record] button for 3 seconds to start recording. During recording, the red circular icon in the upper left of the screen will blink slowly, and the red icon will also be displayed on the working status indicator. Press the [Record] button again to stop recording. The working status indicator will turn green, and the video file will be automatically saved to the TF card. The screen will return to preview mode, and the video will be saved with a date-based filename in AVI format. To view recordings, please refer to the "Playback/Review" section.

8.2 Video Locking:

During video recording, press the [Up/Bookmark] button briefly to lock the current video. Press the [Up/Bookmark] button again briefly to unlock it. During this process, recording will not be interrupted. Locked videos will not be overwritten during loop recording.

9. Photo Taking:

In standby or preview mode, press the [Photo] button to take a photo, which will be automatically saved. During the process, a sound will play, and each time the button is pressed, one photo will be taken. The photo will be saved with a date-based filename in JPG format to the TF card. To view photos, please refer to the "Playback/Review" section.

10. Single Audio Recording:

In standby or preview mode, press and hold the [Record] button for 3 seconds to start single audio recording. The recording icon will appear on the screen, and the working status indicator will flash orange. Press the [Record] button again to stop audio recording. The working status indicator will turn green, and the audio file will be automatically saved to the TF card. The screen will return to preview mode.

11. Infrared Night Vision Mode:

When infrared night vision is enabled, it defaults to "manual" mode. The infrared night vision view is black and white, and switching between black and white and color is based on the sensor. It's suitable for daytime and nighttime use. At night, you must manually switch to infrared night vision mode. In standby or preview mode, press the [Record/Night Vision] button to turn on the infrared mode. At this point, the infrared light will turn on, and the screen will display a black and white image. Press the [Record/Night Vision] button again to turn off infrared mode, and the screen will display a color image. In preview or recording mode, you can switch between black and white and color images by pressing the [Record/Night Vision] button. If switched automatically, it can be set in the menu to "Auto," allowing the infrared mode to switch automatically according to light levels.

12. File Deletion:

Files cannot be deleted on the device if they are stored on the TF card. You can only format the entire card to delete files.

13. Playback/View Recording

a. In standby mode, press the [Down/Playback] button briefly to enter the playback menu. Press the [Up] or [Down] button to select the option you want to view, such as:

- Video
- Photos
- Audio

b. Press the [OK] button to enter the playback list. Use the [Up] or [Down] button to select the file you want to play.

c. During playback, press the [OK] button to pause or resume playback. Press the [Return] button to go back to the previous menu.

14. Reset and Restart

If the device becomes unresponsive due to improper operation or other special circumstances, use a pen or similar object to press the [Reset] button (be careful not to apply too much force). After pressing the reset button, the device will shut down automatically. Upon restarting, it will recover the settings from before the malfunction.

15. Indicator Descriptions

1. In standby mode, the power indicator will be green and always on.
2. In video recording mode, the work status indicator will be red and blinking slowly.
3. In audio recording mode, the work status indicator will be yellow and blinking slowly.
4. During charging, the power indicator will display green, and the work status indicator will display blue.
5. When charging is complete, the power indicator will turn off, and the work status indicator will show blue.
6. Every time a photo is taken, the work status indicator will flash red once.

16. Strobe Light and White Light, Infrared Night Vision Usage Instructions

1. In standby mode, press the [Alarm] button briefly to turn on the strobe light. The device will flash blue and red strobe lights alternately, while also enabling the alarm sound function for emergency situations. Press the [Alarm] button again to turn off the alarm sound. Press the [Alarm] button again to turn off the strobe light.
2. In standby mode, press and hold the [Alarm] button to turn on the white light. The device will activate white auxiliary light illumination. Press and hold the [Alarm] button again to turn off the white light.

3. In standby mode, press and hold the [Record] button to turn on infrared night vision. Press the [Record] button again to turn off infrared night vision.

